

## **Wheel Balancer**

**To change from grams to ounces, press the Stop Button, A+ Button and A- Button at the same time once. This will remain set after the power is turned off. To change back to grams, repeat procedure.**

## **Calibrating Balancer**

**In this order, wheel is placed on machine –  
Spring – Wheel – Cone – Speed Nut  
Tighten, Use appropriate centering cone**

**To Calibrate –  
Measure with Distance Gauge and input the info under “A”**

**Measure width of rim with calipers and input under “L”**

**Check size of rim from tire and input under “D”**

**Press “R” then Start Button and hold them together until  
balance positioning readout stops flashing.**

**Press Start, when wheel stops add 100G weight anywhere on  
outside of rim.**

**Press Start, when wheel stops machine will be calibrated and  
will say “END CAL”**